



IRIS

REPLACEMENT LEGS

PARTS

1



2




- 1 Replacement leg in blue, black, or red x2
- 2 Set screw x2


These instructions require a 1.5 mm Allen key.

REPLACING A LEG

To replace a leg, remove the set screw in the bottom of the leg using the 1.5 mm Allen key.

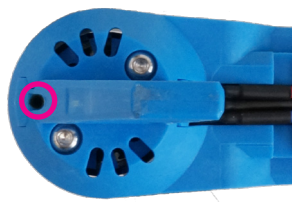

Slide out the leg to remove it, and replace with the new leg. Replace the set screw until it secures the leg, but not so that it is screwed completely into the arm where it could interfere with the motor.

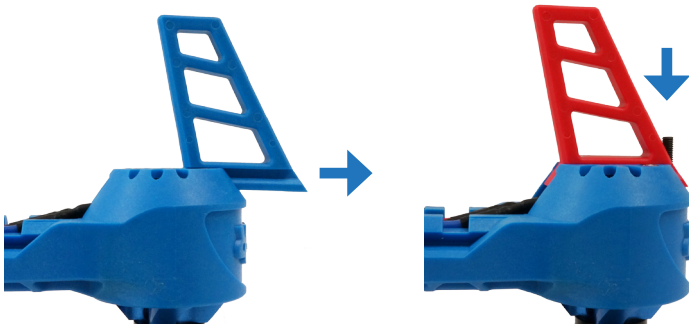

ONLINE RESOURCES

Visit copter.ardupilot.com for more information, instructions, safety information, tutorials, and more. For more instructions on using Iris, visit 3drobotics.com/iris.

SUPPORT

Need help? Contact us at help@3drobotics.com or call our support line at +1 (858) 225-1414.

PURCHASE

Get Iris accessories, APM:Copter add-ons, apparel, and more at store.3drobotics.com.

CONNECT

Follow 3D Robotics on Facebook at facebook.com/3drobotics and on Twitter @3DRobotics!



3DROBOTICS.COM